



Korniche FlatLite™ Rooflight


Installation Guide

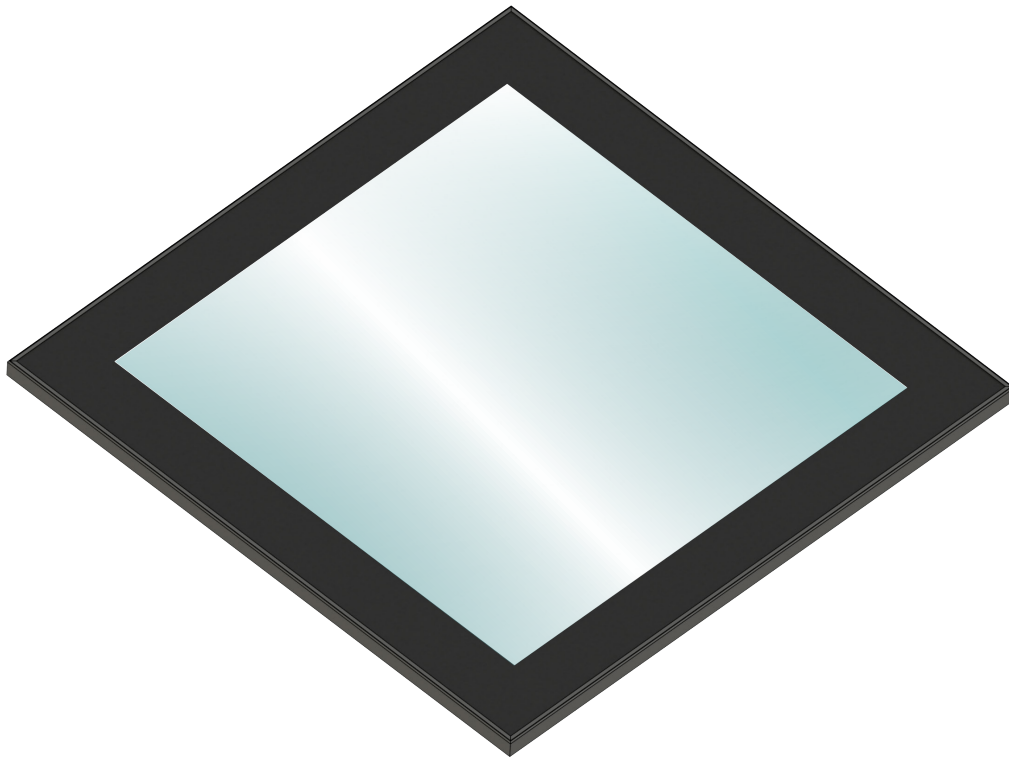


TOOLS REQUIRED

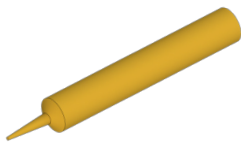

Weather Sealant

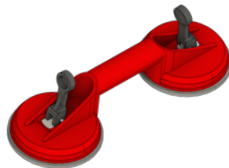


Suction Cup Lifter

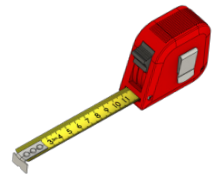

Tape Measure

PACKAGING CONTENTS

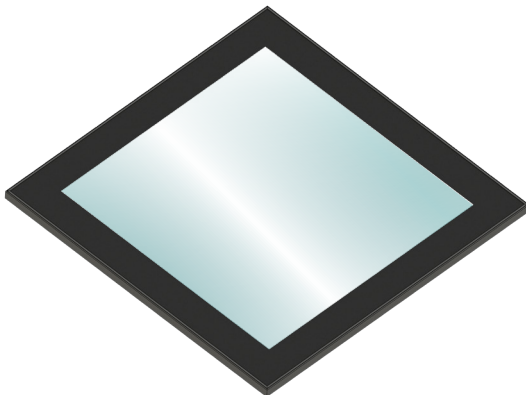


FlatLite™
Bonded Flat Glass Unit



Weather Sealant
(Recommended)


UPSTAND CRITICAL MEASUREMENTS

1

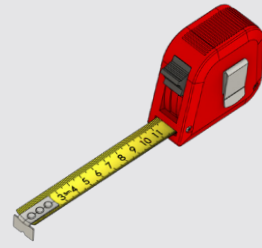


Check upstand meets specification


Recommend Angle 5°
Min Angle 3°

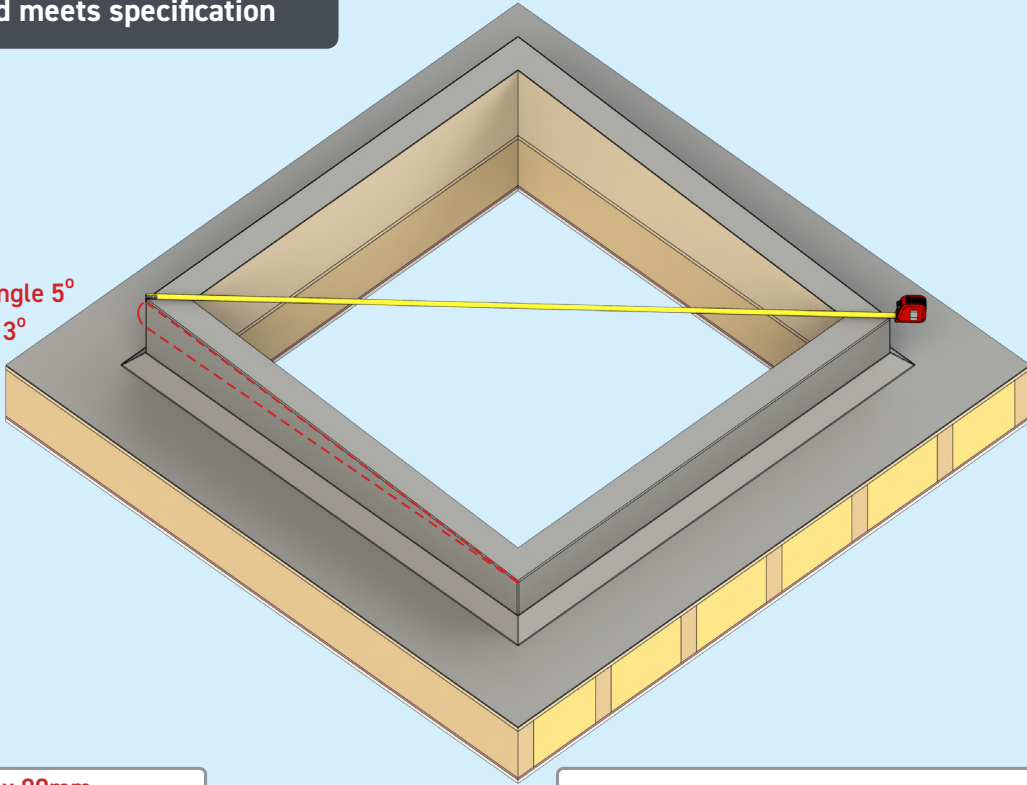

Max 80mm
Min 75mm

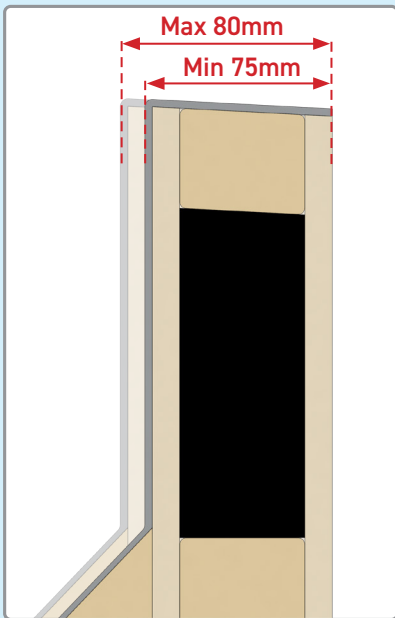


$A = B \pm 3\text{mm}$

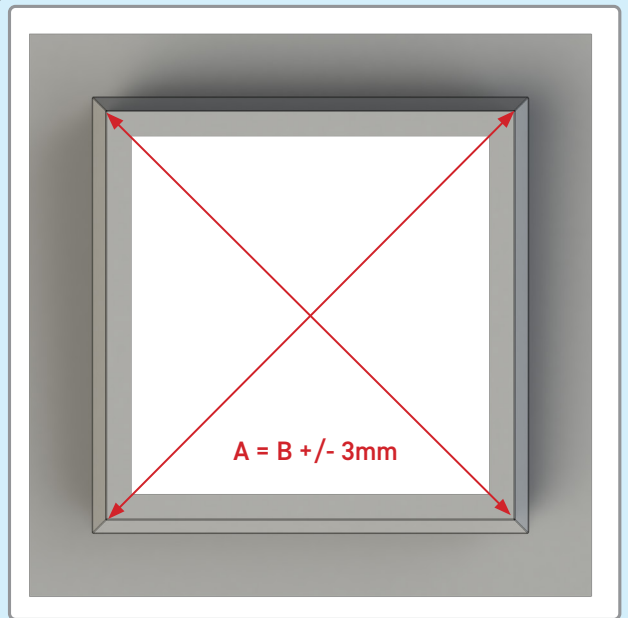





All measurements must be to specification.

FIT FLAT-GLASS UNIT TO UPSTAND

2

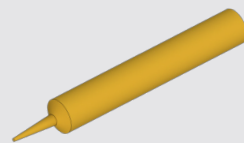


Lay bead of weather sealant onto upstand

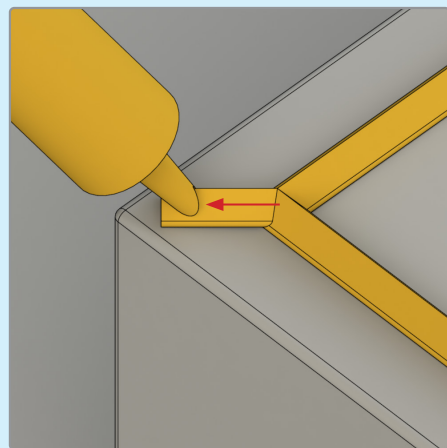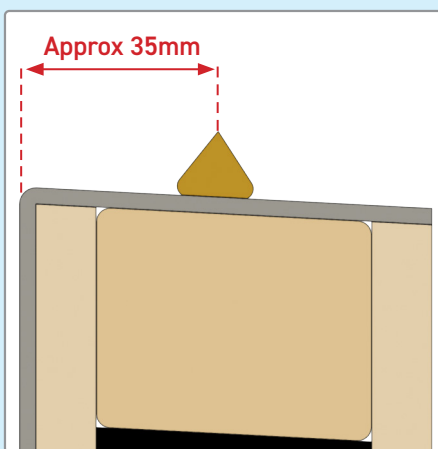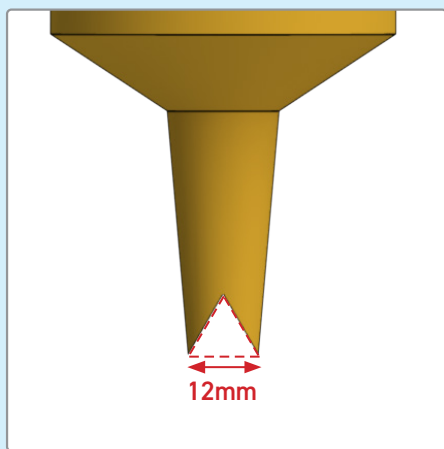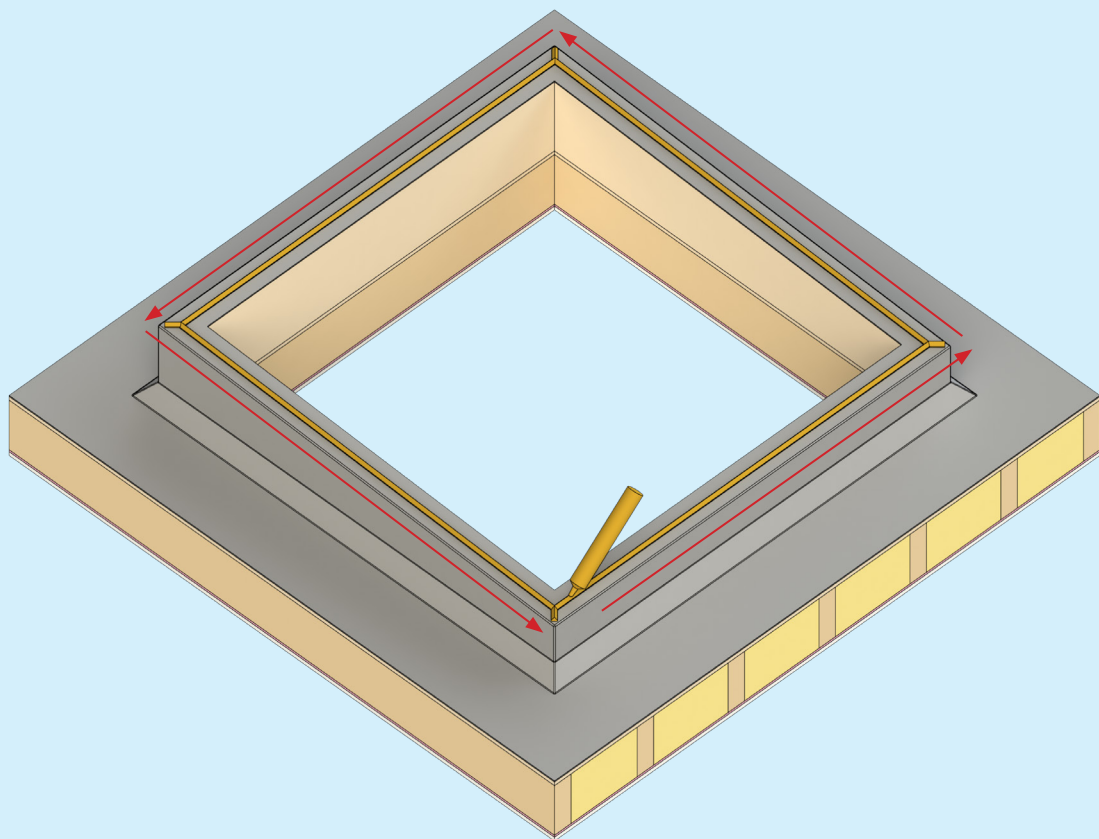





Cut nozzle in a 'V' shape.

FIT FLAT-GLASS UNIT TO UPSTAND

3

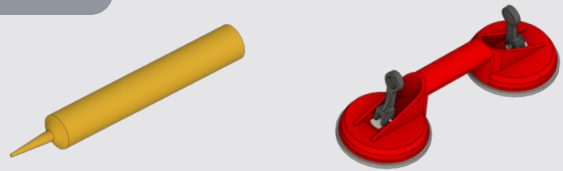


Peel off backing tape before placing Flat-glass unit onto upstand

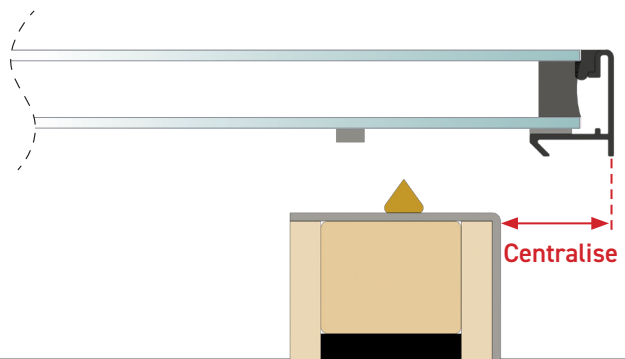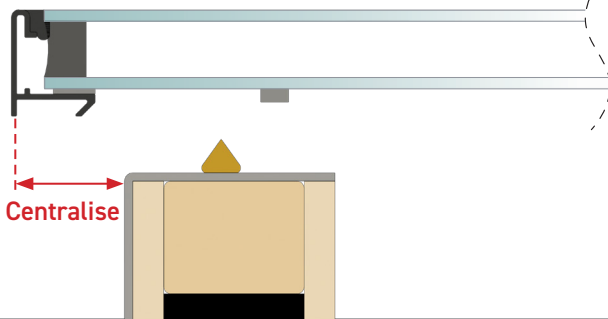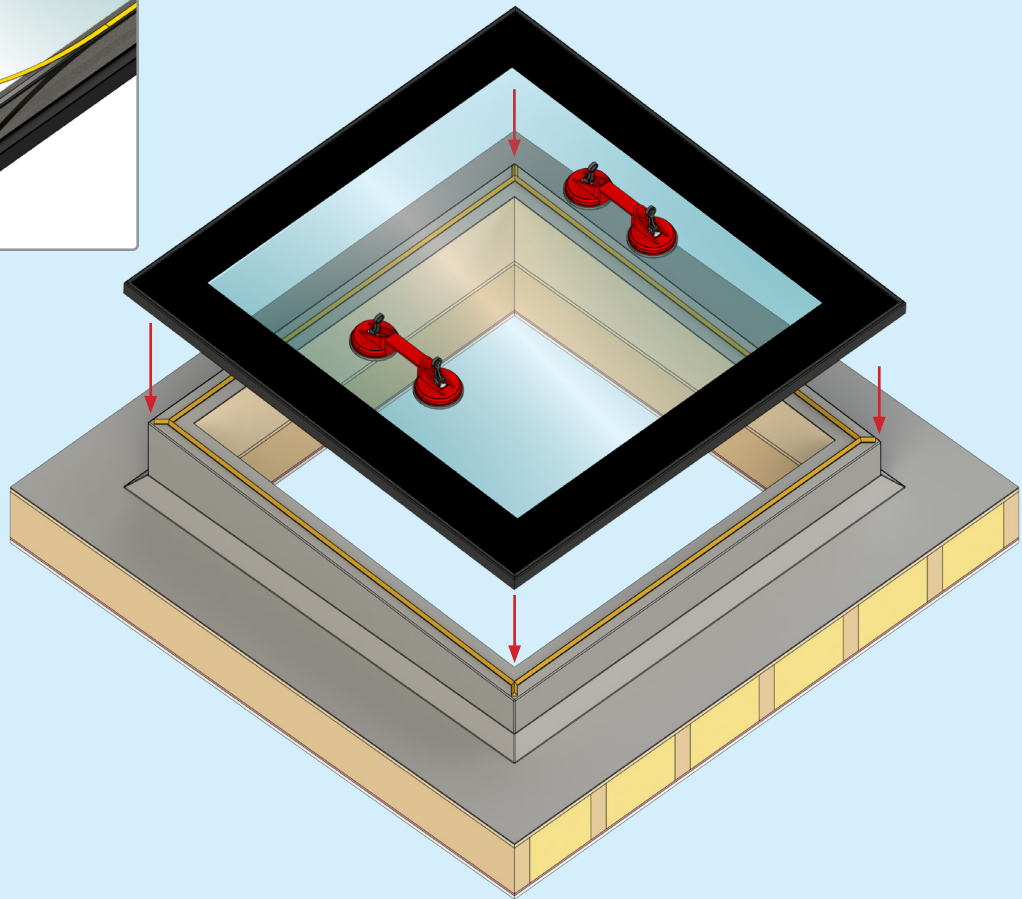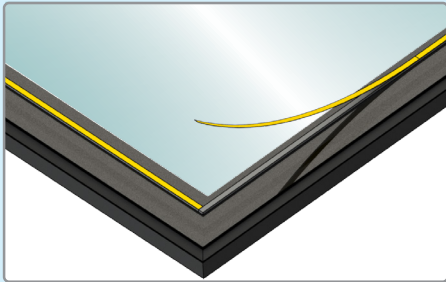






Ensure unit is centralised before applying final downwards pressure.

EXTERNAL WEATHER SEALANT


4

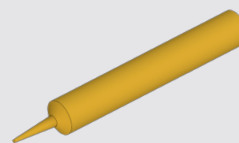

Cut nozzle and run silicone around the perimeter of the profile where shown

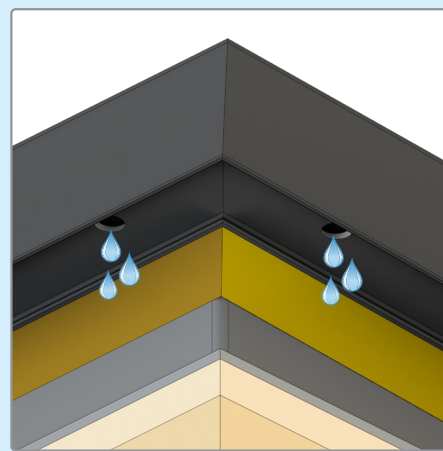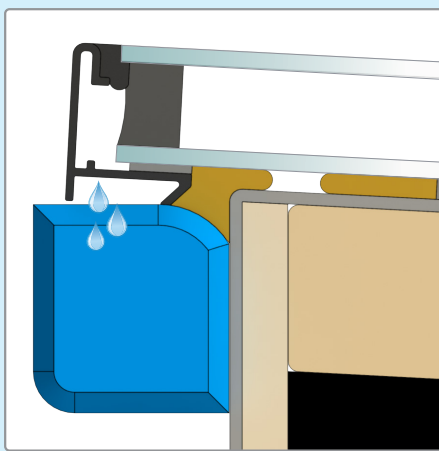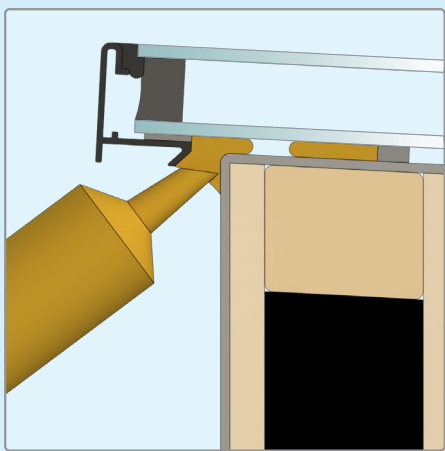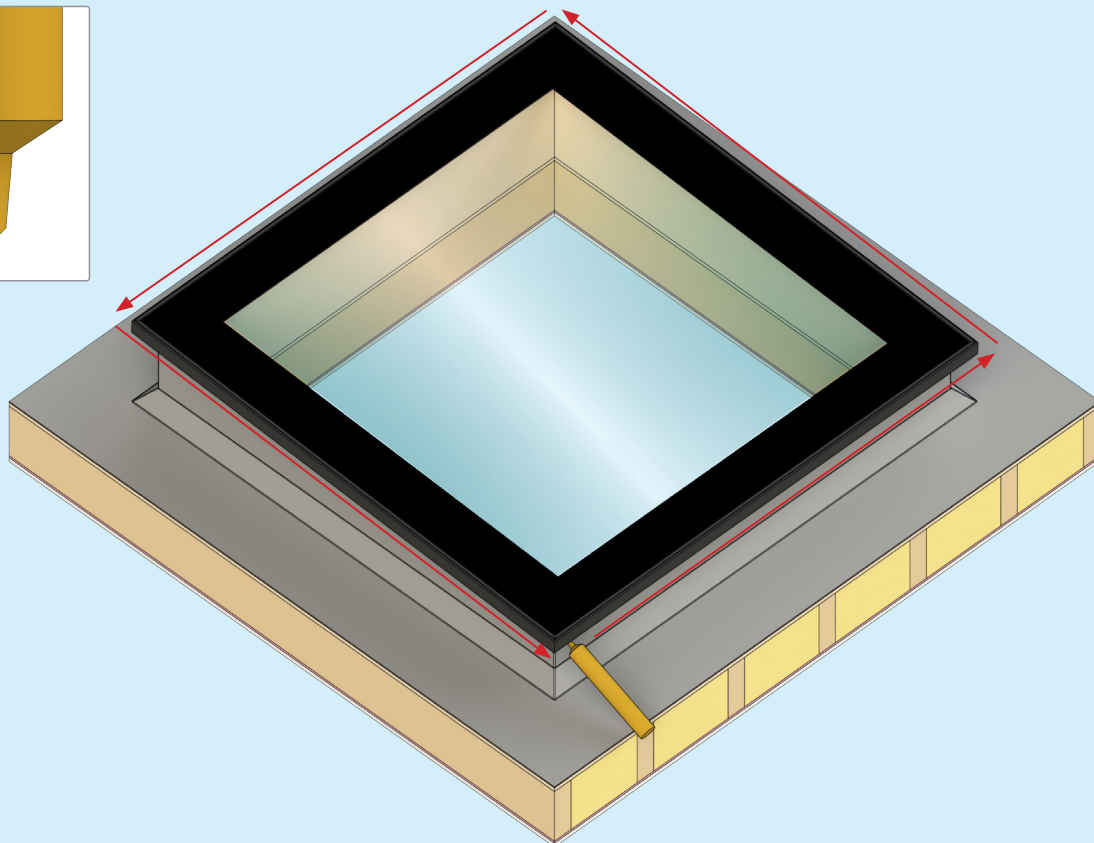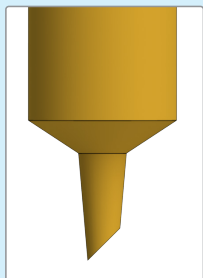

Ensure drainage holes are not blocked.

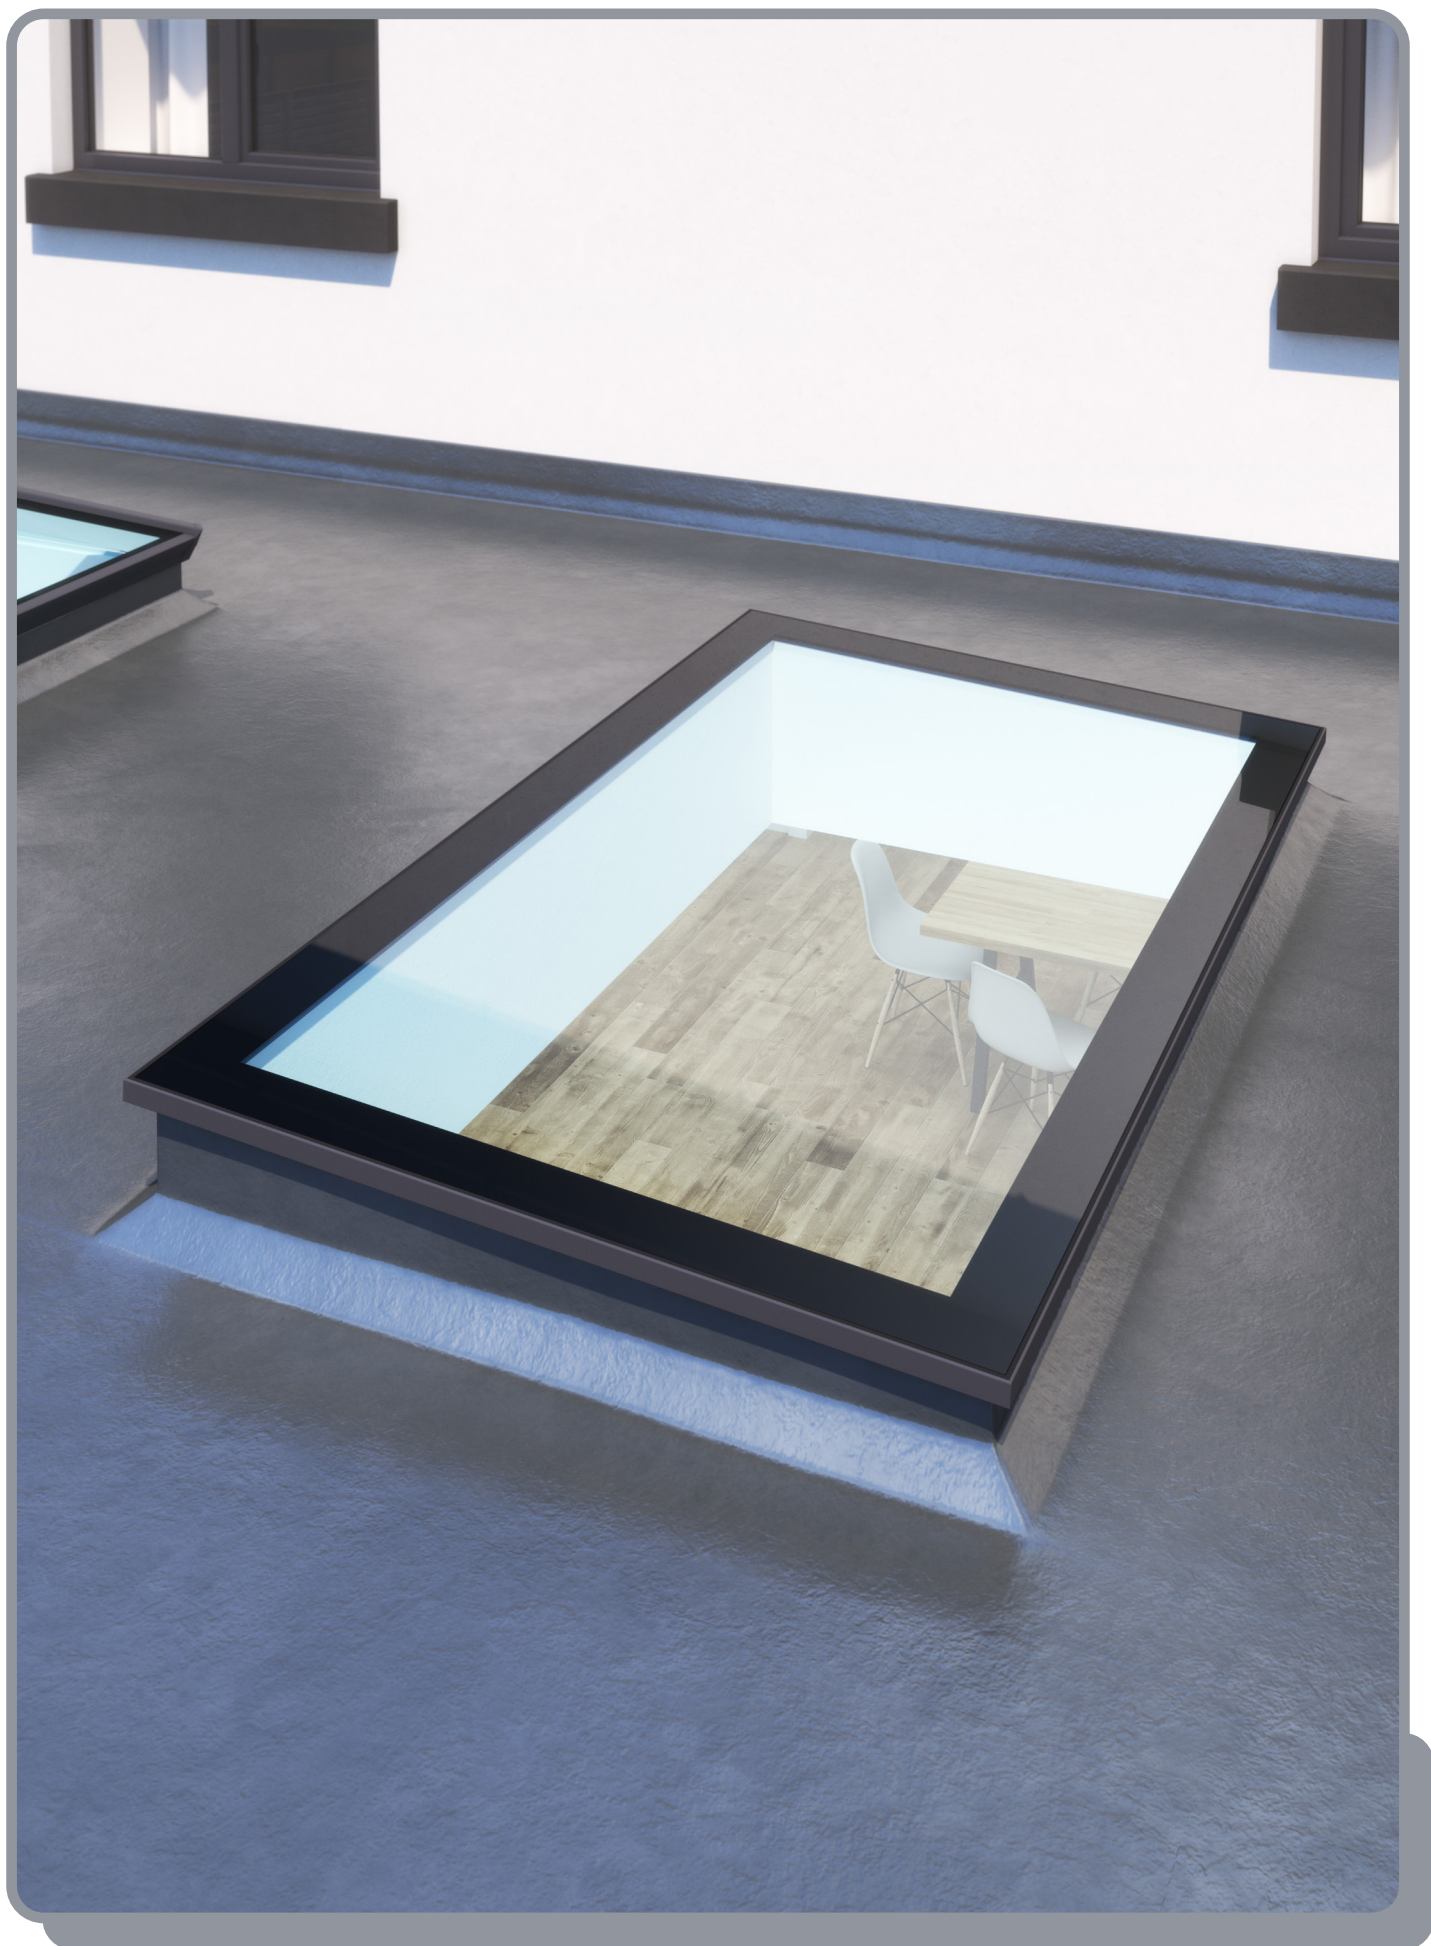



www.korniche.co.uk